

Refuge



26 Ounce — 2 Person — 3 Season Tent



Setting Up Your Tent:

Choose a tent site away from low hanging branches, and clear site of sharp objects such as sticks or rocks. The Refuge floor is constructed of 30 Denier silicone coated nylon. Take care to avoid contact with sharp or abrasive objects. To ensure a long life for your floor, we recommend you put down a ground cloth of Tyvek or some other material. You can purchase ground cloths to fit your tent from us.

1. Lay out tent so that the rear panel (opposite the door) is in the wind.
2. Loosen the corner adjustment webbing and insert a stake through each of the four corners.
3. Adjust both poles to the recommended pole height of **45 inches**. Insert end tip of hiking pole into grommet located in the vent cover and place handle end into the pole cup attached to end of the vestibule.
4. Pull out front guyline and stake. Adjust guyline tension, and position of pole as needed.
5. Repeat for the second pole.
6. Adjust the tension on the canopy as needed.

Allow a half hour for the tent material to relax then re-adjust tension as needed. Make sure you've got a nice even canopy slope running from front to rear of the tent.

For increased headroom and stability under windy conditions, attach guy lines to the side tie-out loops on each side of the canopy and stake out or tie off to vegetation.

Seam Sealing:

Before using your tent, seal exposed outside seams with a Silicone based seam sealer. If you purchased SilNet™, follow the package instructions. Or you may elect to make your own seam sealer, you may find detailed instructions on our website at <http://www.sixmoondesigns.com/support/seam.asp>.

Working in a well ventilated area, pour a small amount into a paper cup. Use a small brush to apply a thin coat of sealer to all **exposed outside seams**. Spread seams open flat and hold them taut while applying, to ensure even coverage. If sealer thickens while applying, stir in a few drops of mineral spirits.

Hang or lay out your tent flat and allow to cure for at least 12 hours. Once cured the seam is permanent, durable and flexible.

Safety Notes:

DO NOT expose tent to open flame from a fire, or stove.

DO NOT cook inside tent.

Price:

Seam Sealed:

Warranty

The Six Moon Designs gear is designed for a long service life. We have a lifetime warranty on workmanship. Since no gear is completely indestructible our warranty does not cover the following conditions:

- Normal wear and tear associated with usage.
- Damage resulting from abuse.
- Degradation of the materials by long term UV exposure.
- Exhaustion of zippers.
- Alteration of the gear from its original form.

Should you need to return the product for warranty or repair, contact us at **store@sixmoondesigns.com** for a return authorization number. We will inspect the gear to determine if defective. At which time we will either repair or replace free of charge. Service or repair of items not covered under warranty will be done at nominal charge.